

E54

5MP Indoor Dome with D/N, IR, Basic WDR,

Fixed lens

Hardware User's Manual

(PoE)

Ver. 2012/12/12





Table of Contents

0. Precautions

1. Introduction

Package Contents	4
Features and Benefits	5
Safety Instructions	6
Physical description	8
Installation Procedure	9
Ceiling Mount	9
Wall Mount	12
Adjust Viewing Angle and Focus	15
Basic Connections	17
Product Specification	18

2. Accessing Camera

19

3

4



0. Precautions

Read these instructions

You should read all the safety and operating instructions before using this product.

Heed all warnings

You must adhere to all the warnings on the product and in the instruction manual. Failure to follow the safety instruction given may directly endanger people, cause damage to the system or to other equipment.

Servicing

Do not attempt to service this video device yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

Trademarks

All names used in this manual are probably registered trademarks of respective companies.

Liability

Every reasonable care has been taken during the writing of this manual. Please inform your local office if you find any inaccuracies or omissions. We cannot be held responsible for any typographical or technical errors and reserve the right to make changes to the product and manuals without prior notice.

FCC/CE Regulation

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the users will be required to correct the interference at their own expense.



1. Introduction

Package Contents





Accessories



Lens Focus Tuner




Warranty Card



QIG



Drill Template

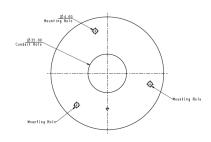



Features and Benefits

This is a cutting-edge digital video surveillance camera. It can compress and transmit real time images with outstanding image quality through a standard TCP/IP network. This camera is your best choice to build an intelligent IP surveillance system.

H.264 High Profile/MJPEG Multi-Codec Dual Streaming

This device supports 2 compression formats, H.264 High Profile and MJPEG. It brings superior image quality at 15 frames per second up to resolution of 2592 x 1944 pixels and 2048 x 1536 pixels. In Full HD 1080p (1920 x 1080), 720p (1280 x 720) and VGA resolution (640 x 480) the device reaches 30 frames per second.

Built-in Hardware Motion Detection

No more external motion sensors are required. You may assign up to 3 video motion detection areas. By tuning the object size and sensitivity, it will reliably detect objects passing though is view. Hardware motion detection also offers better sensitivity and faster response time than software motion detection.

Powerful Bundled Surveillance Software

To extend the capabilities of the IP Camera series, a powerful surveillance program is included in the package for free. Users can easily use an existing PC as a digital video recorder. Scheduled recording and manual recording keep every important video recorded in the local hard disk. Reliable and accurate motion detection with instant warning enables immediate response in every condition. Quick and simple search and playback function lets you easily find the images and video you want.

Software Development Kit Support

This IP Camera can be integrated or controlled by applications from third party software developers. Software developers can save considerable efforts by using our Streaming Library or ActiveX control. Please contact us for details on integration support.



Safety Instructions

Don't open the housing of the product

Cleaning

Disconnect this video product from the power supply before cleaning.

Attachments

Do not use attachments not recommended by the video product manufacturer as they may cause hazards.

Water and Moisture

Do not use this video product near water, for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool and the like.

Don't use accessories not recommended by the manufacturer

Only install this device in a dry place protected from weather

Servicing

Do not attempt to service this video product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

Damage Requiring service

Disconnect this video product from the power supply immediately and refer servicing to qualified service personnel under the following conditions.

- 1) When the power-supply cord or plug is damaged
- 2) If liquid has been spilled, or objects have fallen into the video product.
- 3) If the video product has been directly exposed to rain or water.
- 4) If the video product does not operate normally by following the operating Instructions in this manual. Adjust only those controls that are covered by the instruction manual, as an improper adjustment of other controls may result in damage, and will often require extensive work by a qualified technician to restore the video product to its normal operation.




Safety Check

Upon completion of any service or repairs to this video product, ask the service technician to perform safety checks to determine if the video product is in proper operating condition.



Physical description

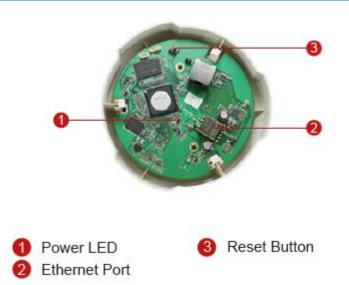

1) Power LED

LED light will light up while the power is on. LED light will light off after the unit has successfully completed the boot process.

2) Ethernet Port

The IP device connects to the Ethernet via a standard RJ45 connector. Supporting NWAY, this IP device can auto detect the speed of local network segment (10Base-T/100Base-TX Ethernet).

3) Reset Button

Step 1: Press and continue to hold the Reset Button for 15 seconds (with a sharp tipped object, like a pen.) while the power of the unit is on.


Step 2: The Ethernet LED light will turn off for about 1~2 seconds and flash on for another second. By this time the reset to default operation is already completed. You may then release the reset button. This length of time fluctuates slightly with the environment. The unit will come back on and stay on after a few more seconds. The unit will start up with factory default settings automatically.




Installation Procedure

Ceiling Mount


Use the drill template, and drill a hole with $\phi35$ on the ceiling

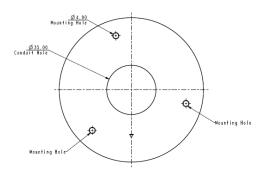

Use the mounting plate and choose the correct three screw holes.

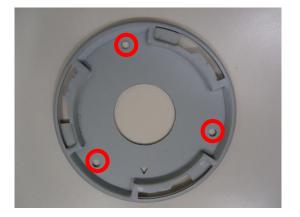


Tighten the plate to ceiling with T4*20 screws (not to use screws other than flat heads)

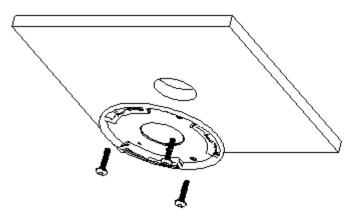





Please make sure the screw is flat on the plate, protruding is incorrect.

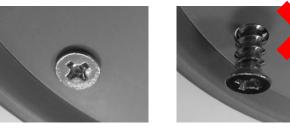

Connect cables through the hole on the ceiling and plate, or on the side of casing

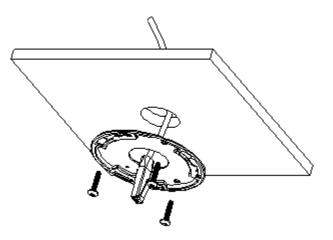


Fasten the camera to ceiling by turning clockwise direction

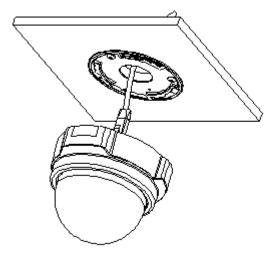




Insert the cables (Network) through the mounting plate and connect to the camera. Then use the little strap in bundled accessory to fasten the network cable.

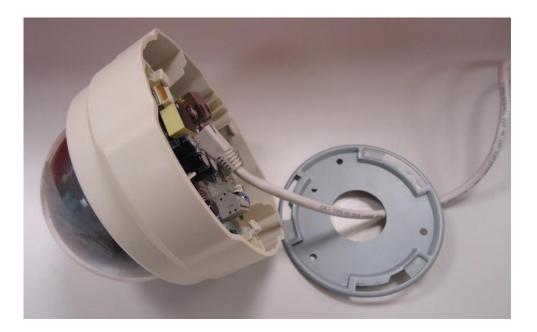


Done

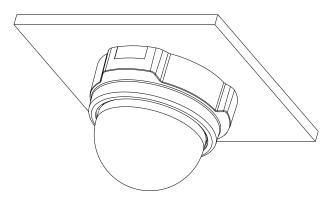



Wall Mount


Tighten wall mount bracket to the wall by 3 PAN Head Tapping screws

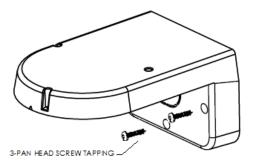


Use the mounting plate and choose the correct three screw holes.



Tighten the plate to wall mount bracket with M4*6 screws (not to use screws other than flat heads), and connect all necessary cables through the hole on the plate and wall mount kit

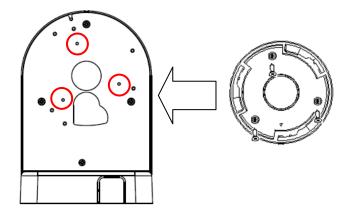



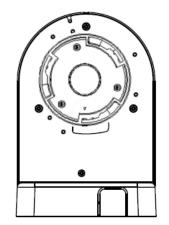


Please make sure the screw is flat on the plate, protruding is incorrect.





Insert the cables (power/Network/audio) through the mounting plate and connect to the camera. Then use the little strap in bundled accessory to fasten the network cable.

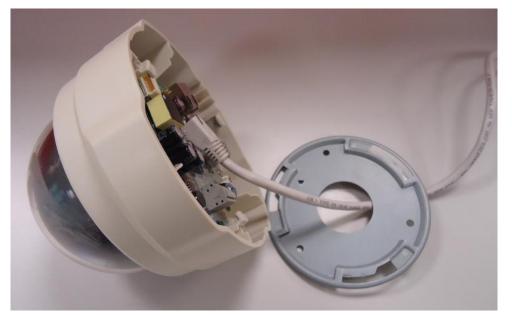



Fasten the camera to wall mount kit by turning clockwise direction and done





Adjust Viewing Angle and Focus

Remove the front cover with counterclockwise direction.



Based on the live view from the camera, adjust the viewing angle with pan and tilt direction.





Attach the focus tuner on lens to adjust the focus of lens.



Remove the lens focus tuner.


Attach the dome cover to the camera and push it into the groove until it clicks.





Basic Connections

Follow the procedures below to connect the IP device to the respective apparatuses.

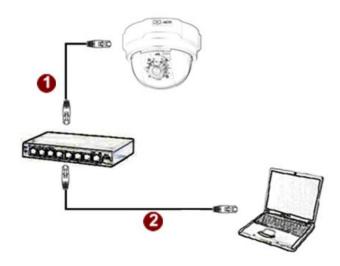

Please use a PoE (Power over Ethernet) supported switch or injector:

- 1) Connect your IP Camera to the PoE Switch / Injector by CAT5 or CAT6 cables with RJ45 connector.
- 2) Connect your PoE Switch / Injector to PC with another CAT5 / CAT6 network cable.



Product Specification

	F54		
Device	EJ4		
Device Type	Fixed Indoor Dome Camera		
Image Sensor	Progressive Scan CMOS		
Day / Night			
Minimum Illumination Color to B/W switch	Color: 0.1 lux at F1.8 (30 IRE, 2400°K); B/W: 0 lux (IR LED on) ISP based switch, configurable		
	ISP based switch, configurable Yes		
Mechanical IR Cut Filter IR Sensitivity Range	Yes 700~1100nm		
IR LED			
	IR LED x 16 (850nm)		
IR Working Distance Electronic Shutter	15 m (0 lux, 30 IRE, Max exposure gain) 1/5 - 1/2.000 sec (Manual / Auto mode)		
Electronic Shutter	1/5 - 1/2,000 sec (Manual / Auto mode)		
• Lens			
Focal Length / Aperture	Fixed focal, f3.6 mm / F1.8		
Iris	Fixed iris		
Focus	Fixed focus		
Mount Type	Board Mount		
Horizontal Viewing Angle	72°		
Viewing Angle Adjustment	Pan: 0° - 330°; Tilt: 20° - 90°		
• Video			
Compression	H.264 HP, MJPEG		
Maximum Frame Rate	15fps at 2592x1944; 15 fps at 2048x1536;		
vs. Resolution	30 fps at 1920 x 1080 (Full HD 1080p); 30 fps at 1280 x 720 (HD 720p); 30 fps at 640 x 480 (VGA)		
Multi-Streaming	Simultaneous dual streams based on two configurations		
Bit Rate	28 Kbps - 6 Mbps (per stream)		
Bit Rate Mode	Constant, Variable		
Image Enhancement	Basic WDR; White balance: automatic, hold, and manual; Brightness; Contrast;Auto gain control; Digital noise reduction; Flickerless		
Privacy Mask	4 configurable regions		
Text Overlay	User defined text on video		
Image Orientation	Image flip and mirror		
Network			
Protocol & Service	TCP, UDP, HTTP, HTTPS, DHCP, PPPoE, RTP, RTSP, IPv6, DNS, DDNS, NTP, ICMP, ARP, IGMP, SMTP, FTP, UPnP, SNMP, Bonjour		
Ethernet Port	1, Ethernet (10/100 Base-T), RJ-45 connector		
Security	IP address filtering; HTTPS encryption; Password protected user levels; IEEE 802.1X network access control		
• Alarm			
Alarm Trigger	Video motion detection (3 regions)		
Alarm Response	Notify control center; Change camera settings; Command other devices; E-mail notification with snapshots; Upload video, snapshot to FTP server		
• General			
• General Power Source / Consumption	PoE Class 2 (IEEE802.3af) / 6.49 W (IR on)		
Weight	292 g (0.64 b)		
Dimensions (Ф x H)	292 g (0.64 lb) 128 mm x 99 mm (5.12" x 3.90")		
Mount Type	Surface, Pendant, Wall, Corner, Pole, Flush		
Operating Temperature	-10 °C ~ 50 °C (14 °F ~ 122 °F)		
Operating Humidity	10 C ~ 50 C (14 F ~ 122 F) 10% ~ 85% RH		
Approvals	CE, FCC		
Approvais			
Integration			
Unified Solution	Fully compatible with ACTi software		
ISV Integration	Software Development Kit (SDK) available; ONVIF compliant		
Firmware Access Browser	Microsoft Internet Explorer 6.0 or newer		



2. Accessing Camera

If you have DHCP server / router in your network:

Many network server / routers are able to automatically provide IP addresses through DHCP. If you are using such a network, just plug in your computer and IP Camera into the network and your IP device will acquire network address by itself. Find and access the device with our IP Utility program. You may download it at:

http://www.acti.com/product/detail/Software/ACTi_Utility_Suite

If you do <u>NOT</u> have DHCP server / router in your network:

- Configure your PC to use the same subnet by changing your PC's IP address to the subnet with prefix 192.168.0.XXX. The last number should be anything from 1 to 254 except 100 and other occupied IP addresses. Subnet mask should be 255.555.255.0.
- 2. The default IP used by this device is 192.168.0.100. Please make sure your PC is <u>NOT</u> using this address and that no two equipments use the same IP address in the network.
- Change your IP address by going to Control Panel ->Manage Network Connections -> Right click on the connection to change -> Option -> TCP/IP IPv4 Properties.



Internet Protocol (TCP/IP) Properties	? ×	
General		
You can get IP settings assigned automatically if your network supports this capability. Otherwise, you need to ask your network administrator for the appropriate IP settings.		Please set the settings as below. ●
Obtain an IP address automatically		
Use the following IP address:		• IP address: 192.168. 0.xxx
IP address: 192 . 168 . 0 . 101		• Subnet mask: 255.255.255.
Subnet mask: 255 , 255 , 255 , 0		• Subilet mask. 255.255.255.
Default gateway.		0
C Obtain DNS server address automatically		(NOTE: xxx should be a number
Use the following DNS server addresses:		(NOTE. XXX should be a humber
Preferred DNS server:		from 1 to 254 except 100, which is
Alternate DNS server:		
		used by the IP device. Please also
Advanced		make sure that no two equipments
OK Can	cel	use the same IP address in the

- 4. Open Internet Explorer (Version 6.0 or above) , and type in the Default IP: 192.168.0.100
- 5. When you see the login window, please input default user and password: Default User: Admin Password: 123456

Web Configurator	Ti
Login Account admin Password •••••• Language English • Login Reset	



6. After logging in, you will see the video from camera. To go to the main menu, click the "Setup" button on the top left.



If you are using a single camera, this is enough to access the device.

If you are using multiple devices, you need to change the current device to another unused IP address, so that when the next device is connected to the network, no two devices use the same IP. Please perform the following steps.

- 7. Go to IP Settings -> Connection Type
- 8. Change the IP mode to Static.
- Change the IP to 192.168.0.101 or any other unused IPs. Do NOT use the PC's IP address or 192.168.0.100.). If this is not the first device you add to the network, please also avoid other devices' IPs.



	Web Configurator	NACTI
• *		
Host Date & Time Network IP Settings	Connection Type*	
Connection Type	Use host name Camera	
Logout	Gateway 172 16 26 253	
	Apply Reset	

- 10. Click "Apply"
- 11. Please go to System -> Save & Reboot, and click "Apply". Internet Explorer will close after a few seconds. This is normal.

	Web Configurator	ACTi
• *		
Host		
Date & Time Metwork		
	Save & Reboot	
IP Settings Video		
± Event	Click apply to save all settings and reboot this device.	
System	Please wait 30 seconds for system reboot. And the window will close in 3 seconds.	
User Account	Apply	
System Info	Арргу	
Factory Default		
Firmware Upload		
Save & Reboot		
Logout		

- Wait for 30 seconds, and open IE again to connect to the **new IP**. (In this example, 192.168.0.101). For the second device or more you add into the network, please type the correct IP.
- Adjust the default Video setting by going to Video -> Video
 Please refer the firmware manual for the detail information.